




# 3 Bike Recumbent Parts List

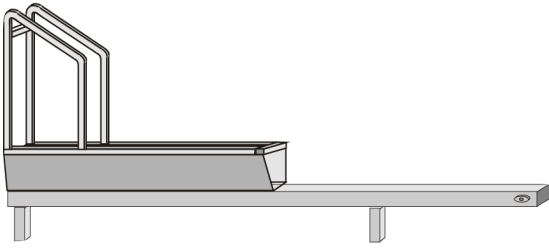


(1) Top Section

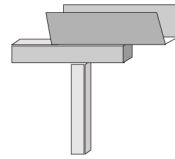

(2) Upper Small Tray

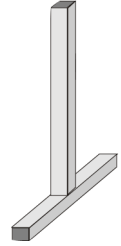


(1) High T-Support

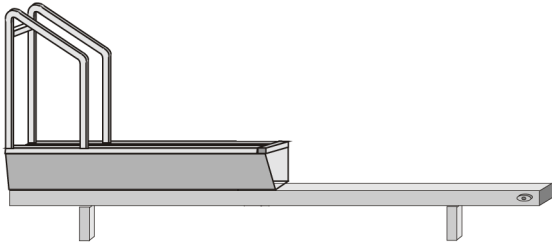


(1) Center Section



(1) Lower Small Tray

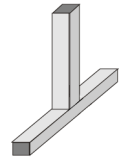


(1) Low T-Support

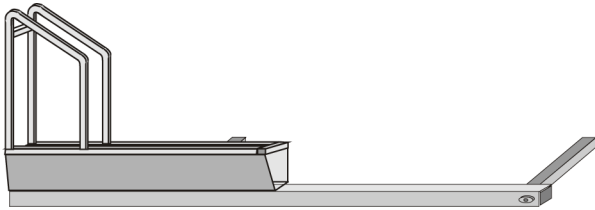

(1) Front Floor Section



(2) Single Legs

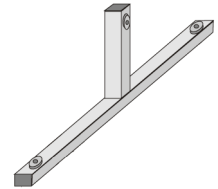

(2) 36" T Base



(3) 49" Bar

## Hardware:


- (15) 5/16" 1/2" Bolts
- (12) 1/2" Black Plugs
- (10) 1" Black Plugs
- (4) Davies Knobs
- (1) Rudy Rack Sticker

## Caster Add-On

- (2) Caster Stems
- (2) Casters with Lock
- (4) C-Channel Caster Bracket
- (8) 1/4" x 1 3/4" Bolts
- (8) 1/4" Stopnut

# 3-Bike Recumbent

1. Lay out (2) 36" T Bases and insert the Center Section in the tops. Tighten using (2) 5/16" x 1/2" bolt.
2. Insert (2) Single Legs into the back of the 36" T Bases. Tighten using (2) Davies Knobs.
3. Insert the Top Section into Single Legs. Tighten using (2) 5/16" x 1/2" Bolts.
4. Insert Front Floor Section into front of 36" T Base. Tighten using (2) Davies Knobs.
5. Insert 49" Bar into the end of the Top, Center, and Front Floor Sections. Tighten each section using (1) 5/16" x 1/2" Bolt.
6. Insert the Lower Small Tray onto the 49" Bar of the Front Lower Section. Tighten using (2) 5/16" x 1/2" Bolt.
7. Insert the Low T Support and High T Support under the Center and Top Small Trays. Tighten using (2) 5/16" x 1/2" Bolts.
8. Insert (2) Upper Small Trays onto remaining 49" Bars. Tighten using (4) 5/16" x 1/2" Bolts.
9. Insert the provided 1" and 1/2" Black Plugs into the exposed ends to give the Recumbent Rack a finished look.
10. If Casters were purchased simply slide the C-Channel onto 49" Bar, as shown. Tighten each using (1) 1/4" x 1 3/4" Bolts and (2) 1/4" Stopnuts.

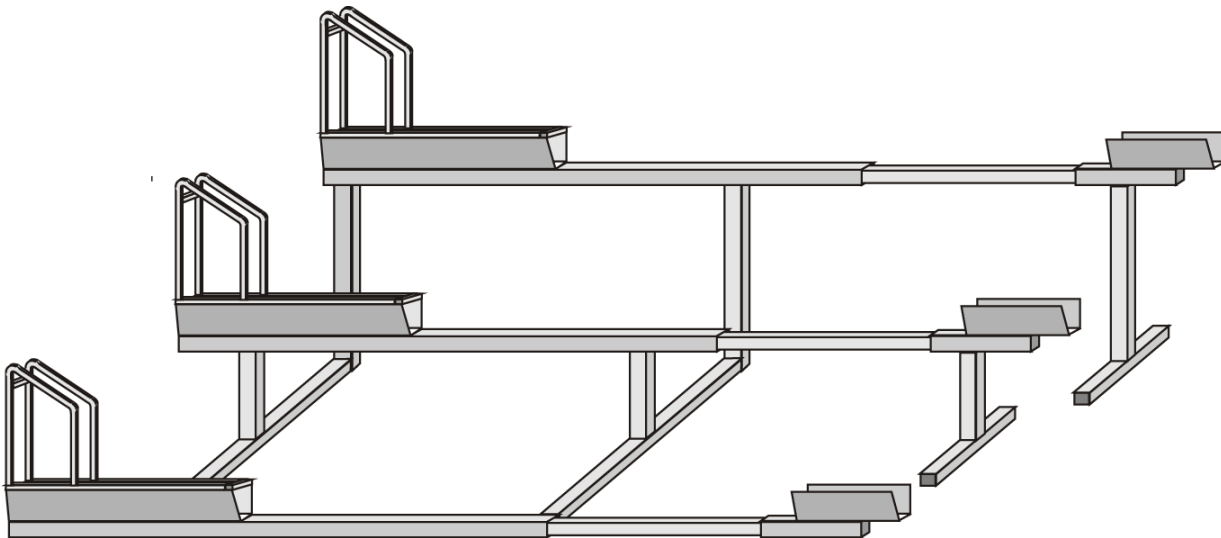

Thank you for your purchase with Rudy Rack.